



Instructions

Sportster Timer Cover

NOTE

When installing your new cover, leave inner gasket in place for those model years that have one.

BQUAZY Sportster recommends installation be done by qualified individuals.

Models

These Kits are designed to fit 1994 to 2003 XL Sportster model motorcycles.

Kit Contents

- 1 - Timer Cover
- 2 - 8-32 Flat Head Screws

See page 2 for picture reference:

1. Drill out the outer cover rivets using a 3/16 in. drill bit. See Figure 1 item 12.
2. If necessary, use a punch to tap the rivets through the outer cover & remove the outer cover.
3. Remove the inner cover screws. Figure 1 item 10. ***If your model year comes with an inner gasket make sure to leave gasket in place.*** Remove inner cover.
4. Install new cover & screws in the same location as the removed screws. See Figure 2. We recommend using Blue Loctite® on the screws to help keep them secure.

Figure 1


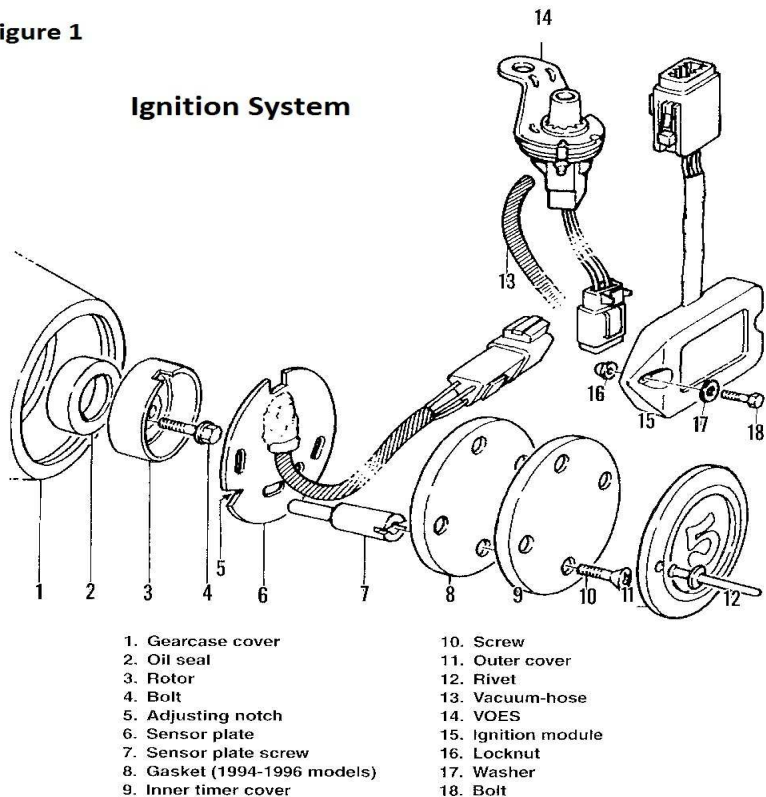


Figure 2






Drill out the outer cover rivets.

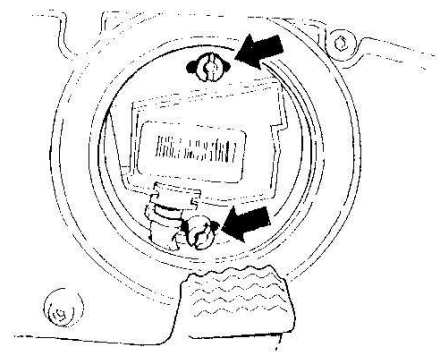

Unscrew top and bottom to remove inner cover.



Remove inner cover.

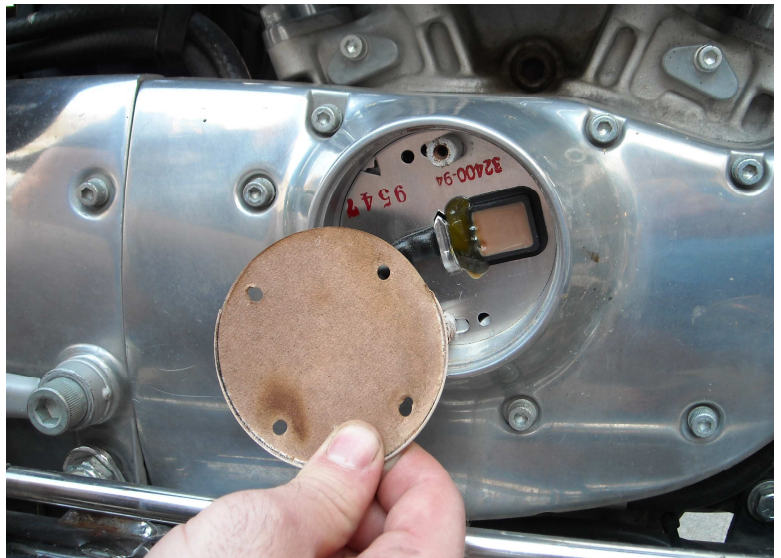

Reuse gasket if present for your model year.



Place gasket over screws on new cover.



Screw new cover in place using Blue Loctite®.