



# Instructions

## Front Lower Motor Mount Cover

### NOTE

*BQUAZY Sportster recommends installation be done by qualified individuals.*

*We also recommend using Blue Loctite® on the bolt to prevent loosening.*

### Models

These Kits are designed to fit 1994 to 2003 XL Sportster model motorcycles.

### Kit Contents

- 1 - Front Lower Motor Mount Cover
- 1 - Stainless Steel 3/8 - 16 Button Head Bolt
- 1 - Stainless Steel 3/8-16 Nut with flange
- 1 - Stainless Steel 3/8 flat washer

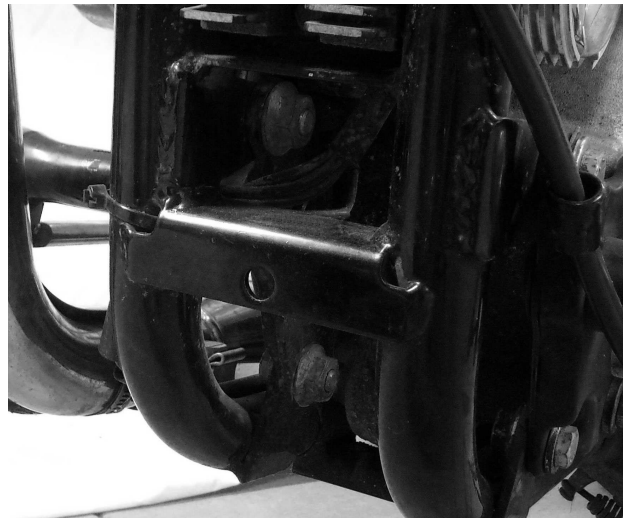


Figure 1.



Figure 2.

1. Before installing cover we recommend that the existing hole on frame is clean and free from obstruction. See Figure 1.
2. If you purchased the bell length cover, we have found it easier to install your bell before mounting cover on bike. We recommend using masking tape around the hole to prevent scratching surface finish with bell ring.
3. We recommend using Blue Loctite® on the bolt & nut to prevent loosening. Place washer on bolt to protect surface finish when tightening. Hold cover in place on frame lining up holes. Install bolt & nut, tighten using 7/32 Hex wrench & 9/16 wrench. See Figure 2.