



# Instructions

## Front Lower Motor Mount Cover

### NOTE

*BQUAZY Sportster recommends installation be done by qualified individuals.*

*We recommend using Blue Loctite® on the screws to prevent loosening.*

### Models

These Kits are designed to fit 2004 and later XL Sportster model motorcycles.

### Kit Contents

- 1 - Front Lower Motor Mount Cover
- 2 - Stainless Steel 3/8 - 16 Button Head Screw
- 2 - Stainless Steel 3/8 flat washer

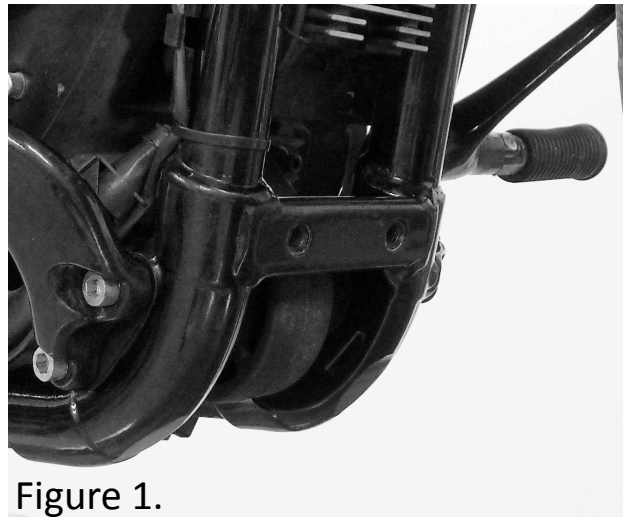


Figure 1.



Figure 2.

1. Before installing cover we recommend that the existing threaded holes on frame are cleaned to be free from obstruction. See Figure 1. Various methods include blowing with air nozzle or using a small wire brush to clean out any debris.
2. If you purchased the bell length cover, we have found it easier to install your bell before mounting cover on bike. We recommend using masking tape around the hole to prevent scratching surface finish with bell ring. See Figure 2.
3. We recommend using Blue Loctite® on the screws to prevent loosening. Place washer on each screw to protect surface finish when tightening. Hold cover in place on frame lining up holes. Install screws and tighten using 7/32 Hex wrench.