



Instructions

Lower Front Frame Cover

NOTE

BQUAZY recommends installation be done by qualified individuals.

We also recommend using Blue Loctite® on bolts to prevent loosening.

Models:

These Kits are designed to fit Softail and Dyna models that do NOT have hardware attached to the front frame mounts. See figures 1 & 2

Kit Contents:

Softail Models include:

- 1 - Lower Frame Cover
- 1 - Stainless Steel 1/4 - 20 Button Head Bolt
- 1 - Stainless Steel 1/4-20 Nut with flange
- 1 - Stainless Steel 1/4 flat washer

Dyna Models include:

- 1 - Lower Frame Cover
- 1 - Stainless Steel 3/8 - 16 Button Head Bolt
- 1 - Stainless Steel 3/8 - 16 Nut with flange
- 1 - Stainless Steel 3/8 flat washer

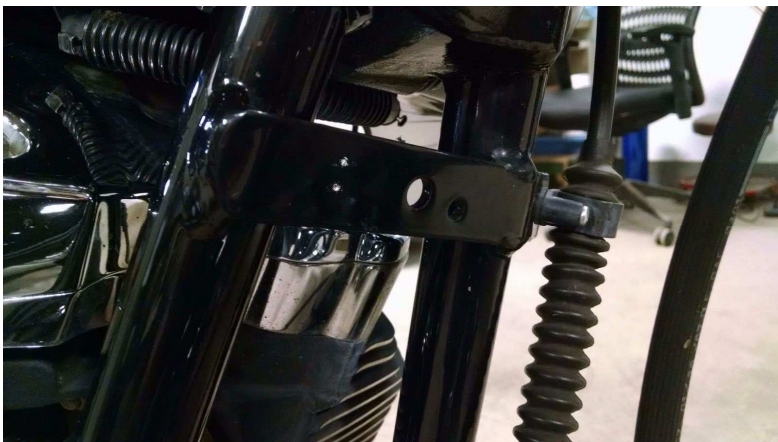


Figure 1. Softail



Figure 2. Dyna

1. Before installing cover we recommend that the existing hole on frame is clean and free from obstruction. Figure 1 or 2 page 1.
2. If using your cover to hang a bell, we have found it easier to install your bell before mounting cover on bike. We recommend using masking tape around the hole to prevent scratching surface finish with bell ring.
3. We recommend using Blue Loctite® on bolt & nut to prevent loosening. Place washer on bolt to protect surface finish when tightening. Hold cover in place on frame lining up holes. Install bolt & nut tighten using the following wrenches:

Softail - 5/32 Hex wrench & 7/16 wrench.

Dyna - 7/32 Hex wrench & 9/16 wrench.

Figure 2

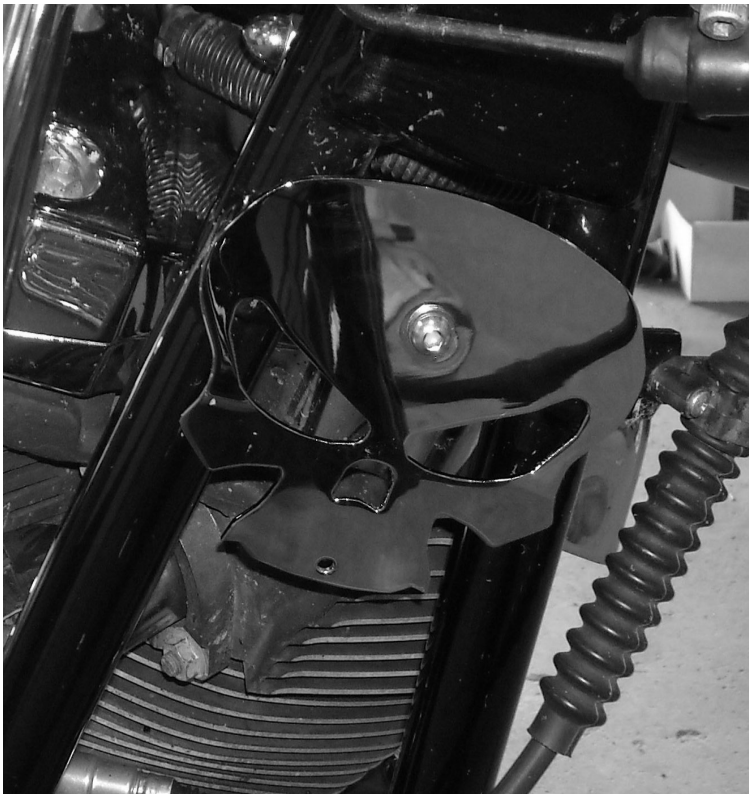


Figure 3.