

Instructions

M8 Timer Cover

NOTE


BQUAZY recommends installation be done by qualified individuals.

Models

This Kit is designed to fit 2017 - later Milwaukee Eight Engines.

Kit Contents

- 1 Timer Cover
- 2 8-32 Socket Head Cap Screws

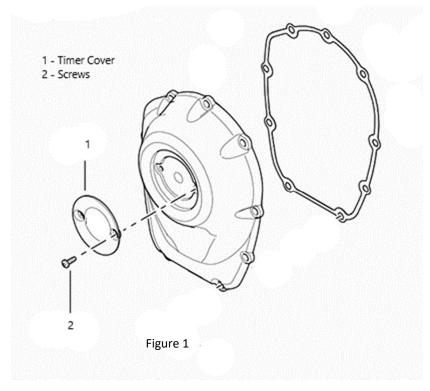

- 1. Remove stock timer cover. See Figure 1
- 2. Install new cover & screws.
- 3. We recommend using Blue Loctite® on the screws to help keep them secure.